


# Catalogue de pièces

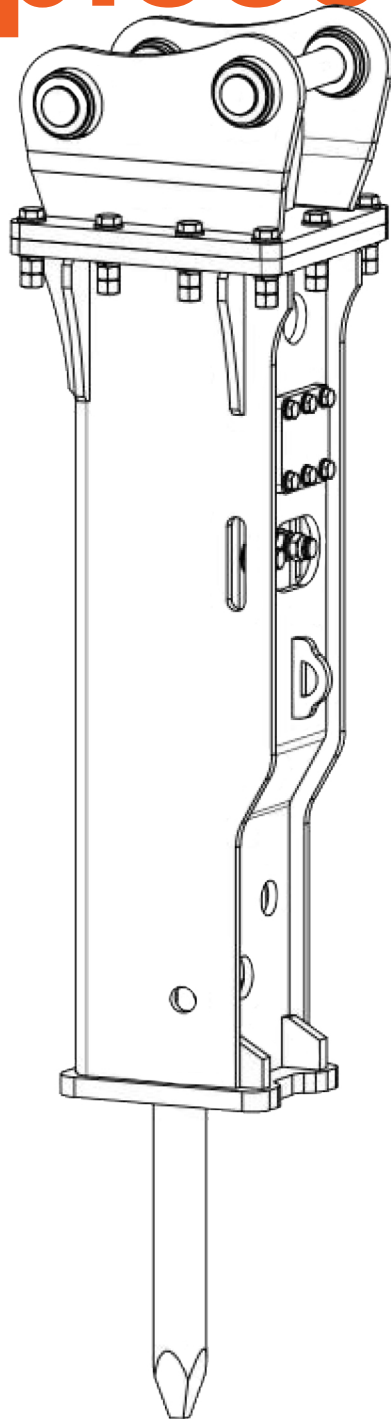




# XRB75

NO.	PART NO.	PART NAME	Q'TY
1	00430BH	Back Head	1
2	00435KP	Knock Pin	2
3	BHCVBF08	B/H Charging Valve	1
4	00430TBHN	Through Boit Hex. Nut	4
5	00430TBW	Through Boit Washer	4
6	00435TB	Through Boit	4
7	SCG068	Gas Seal	1
8	SAS239A	O Ring	3
9	SCS068	Step Seal	2
10	00400SR-A	Seal Retainer	1
11	SBG025	O Ring	1
12	SBP042	O Ring	1
13	00430VC	Valve Cap	1
14	00430V	Valve	1
15	00430VS	Valve Sleeve	1
16	SPBF0B	Socket Plug	3
17	SAP018	O Ring	5
18	ACVBF08-1	Air Check Valve	1
19	SABFF08	Screwed Adapter	2
20	ACBF08	Adapter Cap	2
21	GNBT04	Grease Nipple	1
22	00430CY	Cylinder	1
23	00430P	Piston	1
24	SPBT04	Socket Plug	1
25	SCUP070	U-Packing	1
26	SCD070	Oust Seal	1
27	00430FH-X1	Front Head	1
28	SP1680	Spring Pin	1
29	00430RP	Rod Pin	1
30	00430SP	Stop Pin	2
31	SP1640	Spring Pin	2
32	00430RB-X1	Ring Bush	1
33	00430FC-X1	Front Cover	1
34A	00430T-M	Tool-M Type	1
34B	00430T-V	Tool-V Type	1
34C	00430T-H	Tool-H Type	1
34D	00430T-C	Tool-C Type	1
34E	00430T-B	Tool-B Type	1
101	00430S	Seal Kit	1
102	00430V-AY	Valve Assy	1
104	00435TB-AY	Through Boit Assy	4
105	00430TLB-ST	Tool Box Assy	1
106	00430BH-AY	Back Head Assy	1
107	00430CY-AY	Cylinder Assy	1
108	00430FH-X1-AY	Front Head Assy	1

# XRB75

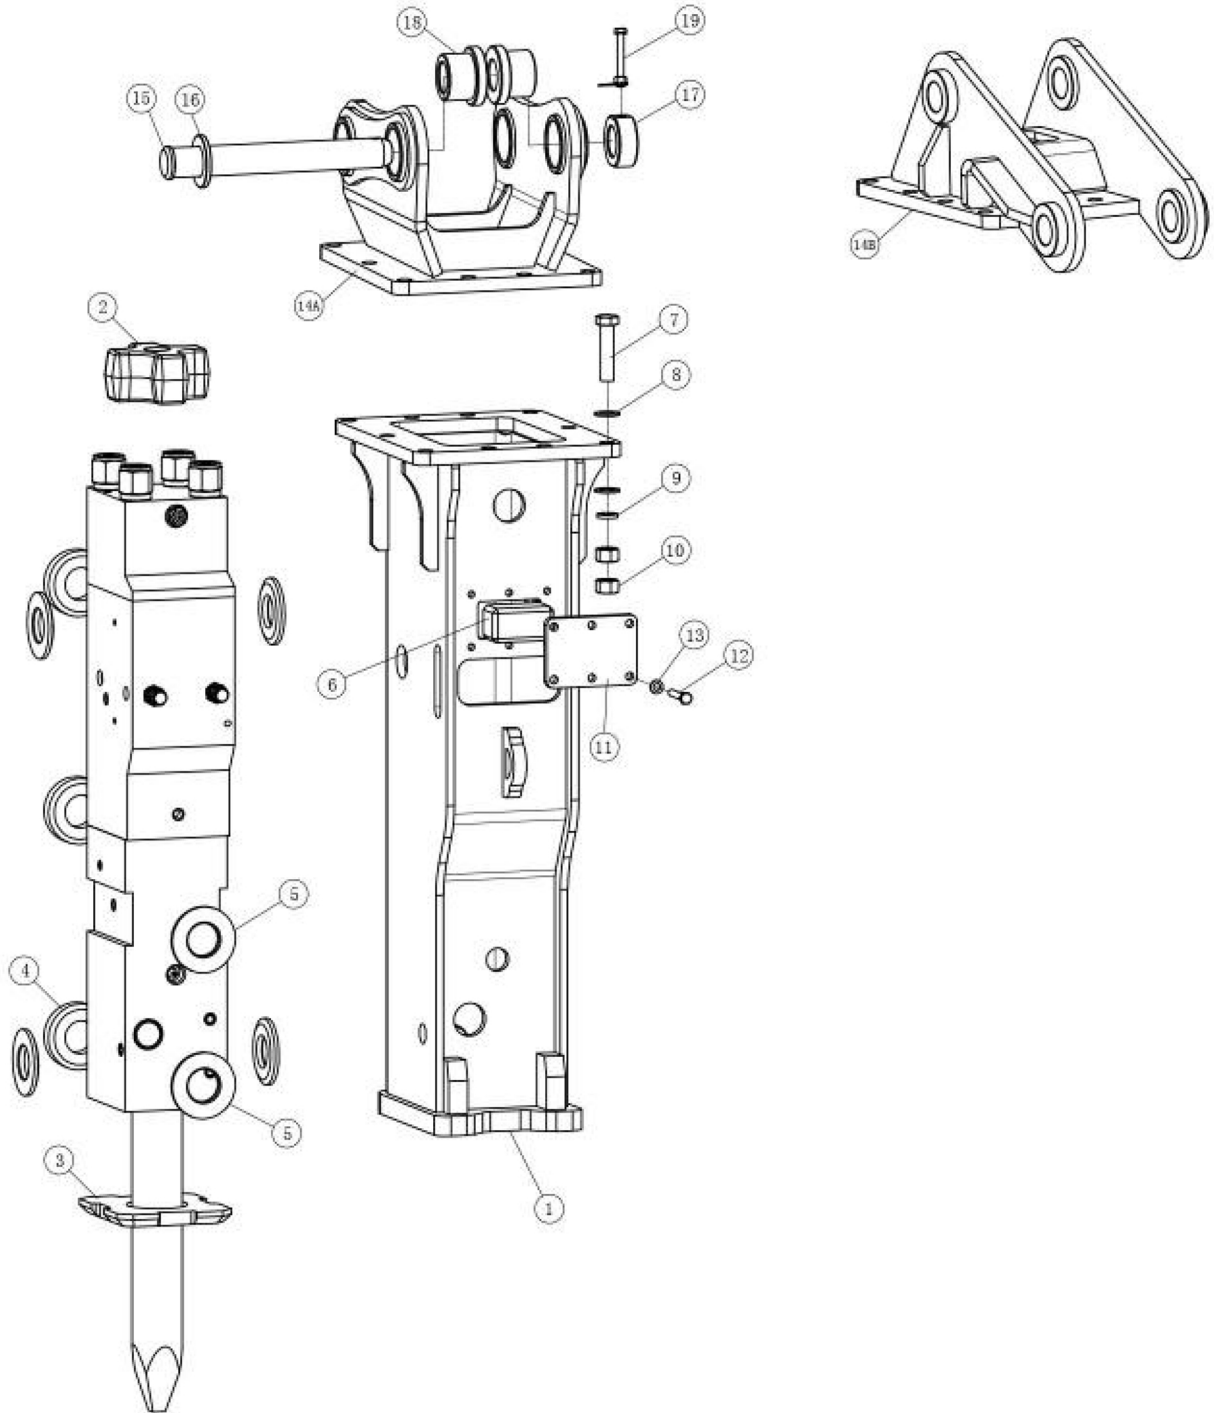

101-1010

# XRB75

NO.	PART NO.	PARTNAME	Q'TY
1	00430F-B20	Frame	1
2	00430CRD	Cross Damper	1
3	00430BLD	Below Damper	1
4	00430SDA	Side Damper A	7
5	00430SOB	Side Damper B	2
6	00430SDC	Side Damper C	1
7	HBM2085	Hex.Bolt	10
8	W20	Washer	20
9	SW20	Spring Washer	10
10	HNM20	Hex.Nut	20
11	00430CV	Cover Plate	1
12	HBM1030	Hex.Bolt	6
13	W10	Washer	6
14A	00430MC-B	Mount Cap	1
14B	00430MC-B-BH	Mount Cap	1
15	00430MP	Mount Pin	2
16	00430MPR	Mount Pin Ring	2
17	00430MPS	Mount Pin Stopper	2
18	00430MPB	Mount Pin Bush	4
19	HBWH-AY	Hex.Bolt Wrth Hole Y	2